



## MALLORCAIR OPERATIONS

# **IF YOUR AIRCRAFT IS ON A PUSH BACK POSITION, THIS IS THE PROCEDURE YOU HAVE TO FOLLOW**

### PUSHBACK PROCEDURE:

- Call delivery frequency, as usual. Normal frequency is 123.875 or check ATIS 119.25.
- Once you get the start up clearance, they will pass you to ground frequency 121.9 or 121.7, to which you report fully ready to push, together with the stand number you are parked in.
- Once ground allows you to be pushed, you give us thumbs up, for us to start to push.
- Make sure that parking brake is removed before we push!